

aiwa cd tray removal

Source: <http://sci.tech-archive.net/Archive/sci.electronics.repair/2004-06/1647.html>

From: Dave Botsch (dwb7_at_cornell.edu)

Date: 06/21/04

Date: Mon, 21 Jun 2004 03:15:59 GMT

Hi, folks.

Have an AIWA NSX-V70 mini cd system (just got back from the class action lawsuit repair on the cd mechanism refusing to play cds —worked great for the past couple of weeks). Unfortunately, it appears that the belt which causes the cd tray to turn came loose. If I eject the tray, I can just see the loose belt under it. From what I can tell, the motor is under the tray on the left side as you look at the system.

Anyway, I figure that if I can get the tray all the way out, I can get the belt back on (or see if there is a broken something else which let the belt come off to begin with... most likely the problem... and then perhaps order the right part).

Thing is, I cannot get the tray out. On that left side, something appears to be keeping the tray from coming out further then it would during normal operation. I can feel some sort of stop taking place.

Any thoughts on how I can get the tray out?

--

```
*****  
David William Botsch  
dwb7@cornell.edu  
*****
```