

Grundig VCR non-functional

Source: <http://sci.tech-archive.net/Archive/sci.electronics.repair/2004-06/2311.html>

From: Arthur Rinkel (arthur_at_unimatrix001.student.utwente.nl)

Date: 06/28/04

Date: 28 Jun 2004 17:55:59 GMT

Hi,

I have found a VCR (Grundig VS520) which is not functioning, i.e. display does not lit. I want to try to fix it, but I can't find the problem. Hopefully somebody can help me a little.

The unit seems to have power only at the power supply part. When the VCR is given power nothing happens at first, but after a while a soft ticking sound emerges from the power supply part. At the same time, a coil located at the cassette transport part of the VCR starts to move in and out (not fast nor slow). This coil connects to a plastic lever.

Grtz, Arthur