

Re: Grundig VCR non-functional

Source: <http://sci.tech-archive.net/Archive/sci.electronics.repair/2004-06/2314.html>

From: Gerald Spindler (*nospam.aon.912669373_at_aon.at*)

Date: 06/28/04

Date: Mon, 28 Jun 2004 20:39:01 +0200

(PSU pulses). Check C1045 (47uF/10V) on PSU sub panel and if you mean the relay by "plastic coil" then it is C420 = 100 uF 25V in supply unit.

regards

gary

--

e-Mail security scan by Symantec Norton Antivirus 2004 successfully completed.

"Arthur Rinkel" <arthur@unimatrix001.student.utwente.nl> schrieb im Newsbeitrag news:cbpm3f\$7n3\$1@ares.cs.utwente.nl...

> Hi,

>

> I have found a VCR (Grundig VS520) which is not functioning, i.e. display does not lit. I want to try to fix it, but I can't find the problem. Hopefully somebody can help me a little.

>

> The unit seems to have power only at the power supply part. When the VCR is given power nothing happens at first, but after a while a soft ticking sound emerges from the power supply part. At the same time, a coil located at the cassette transport part of the VCR starts to move in and out (not fast nor slow). This coil connects to a plastic lever.

>

> Grtz, Arthur