

Re: Weird problem

Source: <http://sci.tech-archive.net/Archive/sci.electronics.repair/2004-10/1954.html>

From: Tom MacIntyre (tom__macintyre_at_hotmail.com)

Date: 10/24/04

Date: Sun, 24 Oct 2004 14:29:23 GMT

On 23 Oct 2004 22:33:58 GMT, fmmck@aol.com (Fred McKenzie) wrote:

><< *I have a Grundig tp 623 tv and tonight it has developed a problem.*
>*During watching a programme it suddenly flipped into childlock mode (even*
>*though the remote control is broken and isn't even in the same room!). >>*
>
>*Nospam-*
>
>*Your story reminds me of the way some computers act when their CMOS battery*
>*dies. In your case, it may be that the childlock mode is the default.*
>
>*If this happens to be the root of your problem, you will still need that remote*
>*to reset it after you replace the battery.*

What battery? It sounds like it's a uP problem.

Tom

>*Fred*