

Re: RCA 46" TV P46725SK won't turn on

Source: <http://sci.tech-archive.net/Archive/sci.electronics.repair/2005-07/msg00386.html>

- *From:* "pink" <dapinkie@xxxxxxxx>
 - *Date:* 4 Jul 2005 13:47:54 -0700
-

Does ctc number = chassis number? If so, the chassis number is PTK169PFA.

I have some troubleshooting skills – I once fixed my Defender arcade game monitor (bad flyback transformer). I have no schematics or tech info other than a parts list and board ID sheet I found under the back panel of the set. I have a DVM. It's not clear how to discharge the flyback transformer... it's not like a regular TV where you'd slip a grounded screwdriver under the rubber cap. Here the HV lead disappears under the three projection tubes. Not sure how to get to those w/o zapping myself in the process.

What else to check?

kip wrote:

> Whats the ctc number on it ??
>
> kip
> "pink" <dapinkie@xxxxxxxx> wrote in message
> news:1120495196.199568.16140@xx
> >I have an RCA rear projection TV P46725SK – set is plugged in and was
> > working fine until today when I tried to turn it on. I can hear a
> > faint "click click click" from the vicinity of the flyback transformer
> > when the power button is pressed. The power light blinks in unison
> > with the clicking sound. I'd like to fix this puppy since I don't have
> > the cash for a new TV right now and it's so heavy I dread getting it
> > out of the house. Help!
> >

-
- *References:*
 - ◆ [RCA 46" TV P46725SK won't turn on](#)
 ◇ *From:* pink
 - ◆ [Re: RCA 46" TV P46725SK won't turn on](#)
 ◇ *From:* kip

Re: RCA 46" TV P46725SK won't turn on

- Prev by Date: *Re: What is it, no one seems to know how to read a newsgroup or do a search?*
- Next by Date: *Re: HOT keeps breaking down*
- Previous by thread: *Re: RCA 46" TV P46725SK won't turn on*
- Next by thread: *Re: RCA 46" TV P46725SK won't turn on*
- Index(es):
 - ◆ *Date*
 - ◆ *Thread*