

## Re: Ping Andrew:–Re: Toshiba 21S04BG Colour TV Service Mode?

---

*Source:* <http://sci.tech–archive.net/Archive/sci.electronics.repair/2005–10/msg01197.html>

---

- *From:* "MCP" <[gf010w5035@xxxxxxxxxxxxxxxxxxxx](mailto:gf010w5035@xxxxxxxxxxxxxxxxxxxx)>
  - *Date:* Tue, 18 Oct 2005 16:15:20 GMT
- 

"Andrew" <[andrew.w.turner@xxxxxxxx](mailto:andrew.w.turner@xxxxxxxx)> wrote in message  
[news:1129561924.471973.4970@xx](mailto:news:1129561924.471973.4970@xx)

- > George,
- > Many thanks for emailing the manual. I've managed to fix the problem
- > but I'd like to go back over it again once I get to figure out how to
- > get the set into Service Mode (more on that in a moment).
- >
- > Section 4–4 of the manual (SCREEN Adjustment) was the clue I needed. At
- > the foot of the page it says "If you do not follow this procedure, the
- > picture may be abnormal. For example, when the TV set is on, the
- > picture becomes(sic) brighter gradually". This tied in with the fault
- > disappearing when the colour temperature was changed and also by it
- > being ok briefly after switch on (on a warm set) – something had
- > drifted and the set was compensating.
- >
- > I managed to correct the problem by \*slightly\* adjusting the Screen G2
- > control clockwise [this is the bottom of the two controls on the line
- > output transformer].
- >
- > I hope you have the same luck as I did. If you find that the Screen
- > control on your set needs a large adjustment then that might indicate
- > another problem. Let me know how you get on.
- >
- >
- > Now then, SERVICE MODE...
- > The instructions in section 4–7 of the manual didn't work for me,
- > namely:
- > [PICTURE OFF]–>[DISPLAY]–>[MENU]–>[MUTE]–>[PICTURE ON]
- >
- > Quite possibly I'm not translating the instructions into the correct
- > buttons on the remote. I also tried Skype\_man's instructions (above)
- > and they didn't appear to work either. Did you manage to get into
- > Service Mode?

Re: Ping Andrew:–Re: Toshiba 21S04BG Colour TV Service Mode?

Andrew, i resoldered the crt board and all the points on the LOT and did some adjusting like you did on the two controls, and am now getting a near perfect picture.

And like you i just cannot get into the service mode?

---

• **References:**

- ◆ **Toshiba 21S04BG Colour TV Service Mode?**  
◇ From: MCP
  - ◆ **Re: Toshiba 21S04BG Colour TV Service Mode?**  
◇ From: MCP
  - ◆ **Re: Toshiba 21S04BG Colour TV Service Mode?**  
◇ From: Andrew
  - ◆ **Re: Toshiba 21S04BG Colour TV Service Mode?**  
◇ From: MCP
  - ◆ **Ping Andrew:–Re: Toshiba 21S04BG Colour TV Service Mode?**  
◇ From: MCP
  - ◆ **Re: Ping Andrew:–Re: Toshiba 21S04BG Colour TV Service Mode?**  
◇ From: Andrew
  - ◆ **Re: Ping Andrew:–Re: Toshiba 21S04BG Colour TV Service Mode?**  
◇ From: Andrew
- Prev by Date: **Re: LA7838 Vertical IC and Mitsubishi CS–3535R**
  - Next by Date: **Re: color adustments do only one at time (sony pvm–8220)**
  - Previous by thread: **Re: Ping Andrew:–Re: Toshiba 21S04BG Colour TV Service Mode?**
  - Next by thread: **Re: SONY HCD–RX66 Combo CD/Cassette = CD does not turn**
  - Index(es):
    - ◆ **Date**
    - ◆ **Thread**