

Magnavox TV 20MS2331/17 Shuts Off 10 Seconds After Turned On

Source: <http://sci.tech--archive.net/Archive/sci.electronics.repair/2005-12/msg00227.html>

- *From:* bpetria@xxxxxxxxxxx (Brad)
 - *Date:* Sun, 04 Dec 2005 13:04:44 GMT
-

Hi,

Thanks to Robert for his willingness to help me, but the schematic was for a different model TV and the symptom is different. This TV doesn't have the part he indicated.

This Magnavox TV model 20MS2331/17 (mfg. June 2004) came into my shop. Note: I do not have a S.M. for this model.

The TV will turn on. A moment after the picture comes on and you hear sound, the TV turns off. I checked the regulated B+ source for the horizontal output circuit and it measures +94.8V. Without the S.M., I don't know if this voltage is normal.

Do you have any ideas what is causing this?

Thanks in advance, Brad

Before you type your password, credit card number, etc., be sure there is no active key logger (spyware) in your PC.

.

- Prev by Date: ***[Re: Magnavox TV 20MS2331/17 Shuts Off 11 Seconds After Turned On](#)***
- Next by Date: ***[Re: replacing head assy in a hard drive](#)***
- Previous by thread: ***[WANTED: Balance Control Pot For Nikko Receiver](#)***
- Next by thread: ***[Maybe my tv wants to kill me!](#)***
- Index(es):
 - ◆ ***[Date](#)***
 - ◆ ***[Thread](#)***