

## Re: CD Player Question

---

*Source:* <http://sci.tech-archive.net/Archive/sci.electronics.repair/2006-02/msg01212.html>

---

- *From:* "Dave Plowman (News)" <dave@xxxxxxxxxxxxxxxx>
  - *Date:* Sat, 18 Feb 2006 12:21:08 +0000 (GMT)
- 

In article <43f6ea36.781937@xxxxxxxxxxxxxxxx>, Seafarer <Seafarer@xxxxxxxx> wrote:

One of my favourite CD's[Gerry Rafferty] was scratched.I burned it on to my computer and the new disc worked well playing on the computer through Windows Media File player.  
Loaded it on to my workshop CD player and it would not play,same happened with another CD player kept as spare,no go, showing error. Took it home loaded it in my DVD player and it worked perfectly.  
The writable disc is a CD-RW80 High speed 4-12x.  
got to be a reason but I'm not clued up on CD recorders.

Some CD players from just before the days of recordable CDs won't play them. Funnily, the earliest CD players often will. The reflective coating is different on a home burn CD to a commercial one.

---

\*There are 3 kinds of people: those who can count & those who can't.

Dave Plowman dave@xxxxxxxxxxxxxxxx London SW  
To e-mail, change noise into sound.

.