

# Need help with older RCA Tv with solder ground problem

---

*Source:* <http://sci.tech-archive.net/Archive/sci.electronics.repair/2006-02/msg01833.html>

---

- *From:* "stryped" <[stryped@xxxxxxxxxxx](mailto:stryped@xxxxxxxxxxx)>
  - *Date:* 28 Feb 2006 05:50:11 -0800
- 

x-no-archive:yes

I have a :

Model # G35830WK

Chasis # CTC169JS6

With stations that go in and out. Wiggeling the coax sometimes fixes it. I am assumming this is the notorious tuner ground problem. I have not opened up the tv yet. Does anyone have a diagram on where the tuner is and what needs to be taken off to get to it to re solder the tuner shield?

I have also read elsewhere that some have fixed this by soldering a jumper wire from the shield to a ground. Is this an acceptable fix for those whose soldering skills may not be stellar? What ground would you run the jumper wire to?

Thanks for your help!

.