

Yamaha RX-V470

Source: <http://sci.tech-archive.net/Archive/sci.electronics.repair/2006-08/msg00018.html>

- *From:* "digdug" <dug6@xxxxxxxxxxx>
 - *Date:* 6 Aug 2006 09:41:00 -0700
-

Hi,

I've had this receiver for a number of years and am quite happy with it overall.

A bit of usage history.

I use my receiver for AM/FM listening, CD's as well as movies and TV. I run everything through it.

A few months ago while watching TV and Movies (DVD,VHS) the sound started switching on and off randomly, however the music side is still working properly. you could actually hear the part inside switch on and off.....If I knew what part it is I could replace it.....

Can anyone please help???

.