

My VCR won't rewind....Need Help.

Source: <http://sci.tech-archive.net/Archive/sci.electronics.repair/2006-08/msg00154.html>

- *From:* jayb9182@xxxxxxxxxx
 - *Date:* 7 Aug 2006 14:48:09 -0700
-

For some reason my VCR stopped rewinding. It Fast-Forwards with no problem. In search mode (as the tape is playing) it will Rewind and FF without a problem. It's just that it won't rewind when the tape isn't playing.

A few days ago the picture got really screwed up on it and I opened it up to see if there was any way to fix it. I managed to fix the picture, but when I tried rewinding the tape it just acted like it was rewinding for a second or two, but nothing actually happened. The VCR then grabbed the tape just like it does when a tape is being played, but without advancing the tape. I fear that maybe while i had it open I may have knocked something out of place or flipped some lever by mistake. I am fairly certain that I didn't break anything, but rather just knocked something out of place.

Any suggestions on how to fix it???

.