

## Re: Panasonic DVD-S27 acting odd

---

*Source:* <http://sci.tech-archive.net/Archive/sci.electronics.repair/2007-05/msg01376.html>

---

- *From:* "Arfa Daily" <[arfa.daily@xxxxxxxxxxxxx](mailto:arfa.daily@xxxxxxxxxxxxx)>
  - *Date:* Tue, 29 May 2007 08:15:47 GMT
- 

"Mark Modrall" <[mmodrall@xxxxxxxxxxxxx](mailto:mmodrall@xxxxxxxxxxxxx)> wrote in message  
<news:mmodrall-04911F.11131528052007@xxxxxxxxxxxxxxxxxxxxx>

Hi...

We've got a Panasonic dvd player (the S27). It's been through about 4 years of good use, but the last couple of days it's been acting very strangely. You put in a disk, and as it puts up the progress bar of reading the directory it gets 1 tick in and then shuts down completely. Won't power back up unless you unplug it, leave it for 30 seconds, then plug it back in.

Of course when it comes back up it does the same thing – start reading the disk, then fritz.

Anything to do with this other than replace it?

Thanks  
Mark

Does it still read a CD ?

Arfa

.