

# Re: Phillips TV does not hold default channel

---

*Source:* <http://sci.tech--archive.net/Archive/sci.electronics.repair/2007-06/msg00967.html>

---

- *From:* "Arfa Daily" <[arfa.daily@xxxxxxxxxxxx](mailto:arfa.daily@xxxxxxxxxxxx)>
  - *Date:* Mon, 18 Jun 2007 23:53:01 GMT
- 

"ms" <[ms@xxxxxxxxxxxx](mailto:ms@xxxxxxxxxxxx)> wrote in message  
[news:5dnhhbF34le40U2@xxxxxxxxxxxxxxxxxxxxxxxx](mailto:news:5dnhhbF34le40U2@xxxxxxxxxxxxxxxxxxxxxxxx)

"JANA" <[jana@xxxxxxxxxxxxxxxxxxxx](mailto:jana@xxxxxxxxxxxxxxxxxxxx)> wrote in  
[news:137c2skolk90c4a@xxxxxxxxxxxxxxxxxxxxxxxx](mailto:news:137c2skolk90c4a@xxxxxxxxxxxxxxxxxxxxxxxx):

Make sure that the TV's AC cord is plugged directly to the main outlet, and not through the decoder box (dish box).

Many models of TV sets, when switched off, if they loose the AC supply, the default user memory will be re-set to the default.

If the TV set is being used properly, it is possible that there is a defect with the internal memory of the TV set in the area that works with the user set-up. In this case, the set will have to be serviced. Some sets use an internal battery, while some other's use an internal memory built in to one of the microcontroler chips. If the fault is not directly from a memory battery, then servicing the set can get fairly involved.

We will shortly go off Dish Network, just use a roof antenna, then with only 5 local channels, changing the channel manually will be no problem. And with so little to watch, I usually only watch the PBS channel anyway.

ms

????????????????????

Arfa