

Re: Stuck VCR tape, DVD not reading

Source: <http://sci.tech-archive.net/Archive/sci.electronics.repair/2007-08/msg00973.html>

- *From:* Art <scimethod2000@xxxxxxxxxx>
 - *Date:* Thu, 23 Aug 2007 20:45:56 -0700
-

On Aug 23, 6:42 pm, "Arfa Daily" <arfa.da...@xxxxxxxxxxxxxx> wrote:

"Art" <scimethod2...@xxxxxxxxxx> wrote in message

news:1187902602.365664.322840@xx

I've got a Toshiba SD-V392SU DVC/VCR player, and there's a tape stuck inside. It won't play, and when you hit "eject", the little "VCR spool" icon flashes, indicating that there's no tape inside. So, there ya go: it won't eject or play since it thinks there's no tape inside to play or eject. Upon opening the cabinet up, I easily found the little motor that appears to eject the tape. Trouble is, it is a worm drive setup, and the nylon gear is too small and too slippery to turn by hand. Taking out the chassis that holds the tape doesn't appear feasible (a screw that holds it in is only accessible by taking out the tape), and even if it could be taken out, doesn't appear to be a step toward solving the problem.

So, I gotta actuate the motor. The motor has 2 easily accessible terminal that have been soldered to. They are labeled "+" and "-", indicating the motor is a DC motor. If I hook up an external DC voltage to the terminals, what voltage should I try? More importantly, will damage result if the voltage is applied without unsoldering the motor's terminals? If I hook up my supply by following the "+" and "-" terminals' markings, will that eject the tape or suck the tape in harder? Finally, if this is unwise, I might be able to take out the motor. If so, then eliminating the worm drive gear should allow the rest of the accessible gear train to turn smoothly by hand...right? Will this allow me to take out the tape?

Suppose I get the tape out. Now what? What makes the VCR think there's no tape inside?

Re: Stuck VCR tape, DVD not reading

Consider next the DVD portion of the player. Tray works, it spins the disc, but it won't read DVD's or CD's. Is fixing this feasible, or is there likely some tiny internal problem not fixable?

Art

Try 6v on the motor, but disconnect it first, as you may do damage to the driver IC if you don't. If you only use a lowish voltage like this, it is unlikely that you will cause a problem if your first connection attempt causes it to 'suck' rather than 'blow'. You just can't tell which way round to connect it to get eject. The normal running voltage is probably closer to 12v, but 6v should be enough to get it going. As far as the DVD player goes, it is unusual for one to fail to play either a CD or DVD, and unless there is a common cause for both the VCR and DVD problems, which seems on the face of it fairly unlikely, as the DVD at least does all the right things, albeit not finishing up actually reading the disc, then it is likely that the laser is faulty, and it won't be cost effective to repair. Did the DVD and VCR problems occur at the same time, or was there some common external problem such as a storm or sudden power outage prior to the faults appearing ? It's just possible that there is a supply rail missing or noisy, which is shared by both the VCR and DVD, and it is this which is leading to the problems. Once I had got the tape out – or maybe even before trying to – I would measure and 'scope all of the power supply rails, just to make sure that they are good voltage-wise, and 'clean'

Arfa

Thanks for the advice. I haven't tried it yet, but I'll get to it this weekend. I don't recall exactly if the problems occurred together, but am inclined to believe that wasn't the case. Unfortunately, I have no scope at home (just at work) so I can't check the rails for cleanliness, just able to do a bare-bones DVM check. How likely is a blown rail, though, considering all of the other functions (remote sensor, channel tuning/picture is fine, all panel lights okay, etc., sorry I didn't mention this in the OP)?

BTW, I was startled to see the vastly different construction techniques used in the DVD board vs. the VCR/TV board. The DVD board uses SMT, but the VCR/TV board uses what frankly appears to be not so much a printed circuit board as old-fashioned point-to-point wiring and thru-hole components. From above, the board has components and a silk screen image for component labeling, but no traces. It does, however, have tons of holes in which bare wires poke up from below, travel across a short distance, and then go down another hole. What's this all about? My technical skills involve a lot of improvisation (I work in a lab, and am not involved in production), so I'm actually sort of used to this. But how the hell does it pay for a company

Re: Stuck VCR tape, DVD not reading

(producing a product in volume) to do this sort of thing? Any ideas?

Art

.