

# Prima LC-32R25

---

*Source:* <http://sci.tech-archive.net/Archive/sci.electronics.repair/2009-02/msg00497.html>

---

- *From:* ve3tjd <tedd@xxxxxxxxxxx>
  - *Date:* Wed, 18 Feb 2009 04:26:25 -0800 (PST)
- 

Morning guys:

I just picked up a Prima LC-32R25 LCD TV (garage sale). The past owner said the unit had no picture or sound. After pluggin it in, I notice that the back-light comes on, but no video or sound.

I've disassembled the unit and have checked the SMPS and all of the secondary regulators on all the boards. They are all where they should be, with little or no ripple. The only control that works is the "power" button.

Anyone have a schematic, or insight on what to check now? I've been a tech for 25 years but this is my first look at an LCD display!

Thanks,

Tedd, ve3tjd

.